

OPERATION MANUAL


The Air Wellness™ Air Quality Monitor (AQM) has been designed to provide quick, accurate measurement of indoor air quality, using technology that measures the concentration of airborne particles.

The results are indicated on an easy-to-read graphic display. An audible tone also indicates when contaminants are above desirable levels.

This product includes the following:

- AQM unit (with battery installed)
- Recharger
- Carrying case
- Operation manual

- 1 Airflow inlet
- 2 Battery charge level indicator
- 3 Air quality indicator
- 4 Activator (on/off) button
- 5 Display hold button
- 6 Battery recharger connector
- 7 Carrying strap

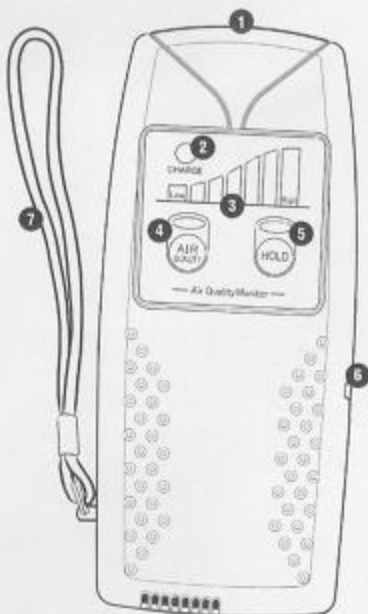

Particle concentration indicated by display



Level	Color	Number of particles (particles/liter of air)
1	blue	500
2	yellow	1000
3	yellow	2000
4	yellow	3000
5	red	4000
6	red	5000 and above

OPERATING THE AQM

The AQM is activated by pressing the button marked AIR QUALITY.

A light placed above the button will blink to indicate that the AQM is warming up. When the warmup interval is completed, the light stays solidly illuminated.

When warmup is complete, the display gradations (bars) indicate the level of dust measured. An audible tone (beeping) will also sound when dust is present in elevated amounts.

If the measured amount of dust decreases, a change will be visible on the display scale and the beeping tone will cease.

This display will adjust upward or downward continuously while in use.

Pressing the button marked HOLD will stop the display from changing and lock in the visible levels shown. This is useful for reference.

Pressing the HOLD button again will allow the display to resume its continuous up or down adjustment.

Prolonged operation

If the level remains stable (no change) for 10 minutes, the display will automatically dim, to preserve battery life. To measure air quality again, press the activator button.

Low battery charge warning

A low battery charge will be indicated when the unit is activated or operating. After the warmup period has elapsed, if the charge is low, all the panel lights will flash several times, then go out. This indicates that the battery requires recharging before use of the AQM.

Turning off the AQM

To shut off the unit, press and hold down the activator button. The display lights will go out and the battery charge level indicator will remain on.

USING THE AQM WITH THE AIR WELLNESS POWERS

The AQM can provide a dramatic indication of the effect of the Air Wellness™ Power5™ in cleaning and improving indoor air.

For best results first take a reading of indoor air when the Power5 has not been operating. Then allow the Power5 unit to run for several minutes. Retest the air and notice the difference the Power5 has made in air quality.

To measure these changes, place the AQM with its inlet opening pointed toward the Power5 outlet vent at the upper right of the back of the Power5 unit.

When measuring, make sure that no aroma sachet is present inside the Power5.